

Home » Manufacturing and Processing: Smart Moisture Measurement Technology Continually Optimizes Product and Process Quality

High-Performance Buildings

Manufacturing and Processing: Smart Moisture Measurement Technology Continually Optimizes Product and Process Quality



Smart moisture measurement devices offer the opportunity for corrective adjustments to be made to enhance production.



Assessing proper moisture level in products and processes is standards, ensuring proper chemical reactions and drying, mold.



March 4, 2021

Del Williams

KEYWORDS [dehumidification](#) / [humidification](#) / [IIoT](#) / [moisture](#) / [monitoring](#) / [sensors](#) / [smart](#)

[Order Reprints](#)

No Comments


In a world full of "smart" devices (i.e., smartphones, smart watches, and smart appliances), such technology is increasingly entering manufacturing and processing in forms like condition monitoring, advanced robotics, and Industrial IoT (IIoT).

On the production floor, "smart" equates with the ability to continually monitor conditions such as product and input moisture content in real-time to optimize quality. Assessing proper moisture levels in products and processes is essential for many reasons, such as meeting regulatory standards, ensuring proper chemical reactions and drying, maximizing shelf life and deterring mold, as well as increasing selling price and decreasing shipping cost.

"Whether manufacturers are mixing; blending; homogenizing; or drying, non-contact, smart inline technology enables the rapid, automatic measuring of moisture in 100% of product or inputs along with the ability to instantly fine-tune the process," said John Bogart, managing director, Kett US, a manufacturer of a full range of moisture and organic composition analyzers.

According to Bogart, the technology is smart because all the calculations are

[Subscribe For Free!](#)

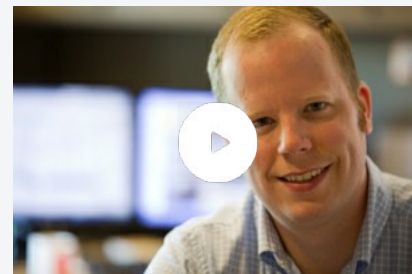


Mechanical Mavericks: Martin Merkel

prev

next

[More Videos](#)

Popular Stories

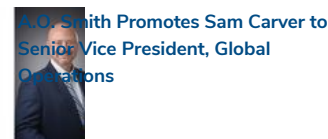

ES ENGINEERED SYSTEMS
CLAIM YOUR SPOT!

performed inside the sensor and measurements are sent on a 24/7 basis to smartphones, PCs, and other devices without having to be connected. If desired, these instruments can prompt operators and managers with alerts as needed. He notes that smart technology enables taking multiple precise moisture measurements each second, sorted within integrated software. This enables not only real-time analysis and error detection but also more accurate results in products subject to variable, fast-changing conditions and processes.

Continuous moisture monitoring by such smart technology, which is cost-effectively available for about \$10 per month, when leased, also allows the tracking of historical performance trends, cyclical rhythms, and periodic failures, so corrective adjustments can be made to enhance production. Such capability also provides product quality and compliance documentation when required.

Breaking from Conventional Limitations

Unleashing the full potential of smart manufacturing and process technology in terms of moisture measurement, however, is not possible using traditional techniques. Conventional testing methods that require time-consuming weighing and drying are often too time and labor-intensive to be practical, and laboratory testing faces the same drawbacks.

“With typical testing, by the time results come back from the lab, any off-spec product can already be processed, packaged, and shipped. If manufacturers are not measuring in real-time, inevitably there will be some variation in inputs, process, and quality,” said Bogart.

Traditional data collection, in fact, is usually too slow, cumbersome, and chained to cords and cables. Manufacturing floors are already crowded with equipment. So, dealing with bulky cords and connections to PCs, keypads, and external switches to transfer data can be too restrictive.

“Fitting inline testing equipment into space-restricted production lines can be difficult when wires, cables, etc. must be run to a variety of peripheral instruments,” said Bogart. “In such cases, the cost of labor, installation, and system integration can be as much as the device itself.”

In response, industry innovation has developed smart inline technology that can rapidly measure moisture in samples multiple times per second. The approach utilizes Near-Infrared (NIR) light in a highly accurate, noncontact, secondary measurement method that can deliver immediate laboratory quality moisture readings without the labor, cost, or delay of conventional techniques.

According to Bogart, NIR moisture meters allow very accurate instant measurement of solids, liquids, and slurries without contact or sample preparation, so there is no contamination. Once the meter has been calibrated against the lab or production standard, the calibration is stored in the device so no additional calibration work is required, and measurements are fully traceable to the original measurement method. Because the process is nondestructive, samples remain unaltered so they can be used for additional tests or put back into the product stream.

“NIR moisture and organic composition meters follow the principle that water and other organics absorb certain wavelengths of light,” said Bogart. “The meter reflects light off the sample, measures how much light has been



Events

June 15, 2022

Process Heating & Cooling Show

The Process Heating & Cooling Show is a conference and tradeshow that will bring together industrial manufacturing and engineering professionals to learn, connect, share and explore all things related to the process heating and cooling industries.

December 30, 2030

Webinar Sponsorship Information

For webinar sponsorship information, visit www.bnpevents.com/webinars or email webinars@bnpmedia.com.

VIEW ALL

SUBMIT AN EVENT

Poll

Salaries & Benefits

How would you describe the salaries and benefits offered at your firm:


- Our compensation exceeds the industry average
- We're right around the industry average
- Our compensation is well below the industry average

SUBMIT

VIEW RESULTS

POLL ARCHIVE

Products

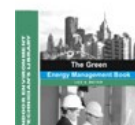

The Green Energy Management Book

Learn from our experts

absorbed, and the result is automatically converted into a moisture (or organic component) content reading.”

One example of such smart technology is the Kett KB30 in-line NIR moisture meter system. The device, which utilizes smart sensor design and is approximately the size of a car battery, enables measurement without connection to controllers, PCs, or other cumbersome I/O devices. Its connections enable local process control and remote integration, and converters are available for wireless, IP, DeviceNet, and other interconnection and communications protocols.

Such connectivity not only cost-effectively eases installation, integration, and maintenance but also enables moisture monitoring and necessary corrective action on 24/7 basis. The corrective action, according to Bogart, can be set up to be accomplished either automatically or via alert and action taken by plant operators, managers, or engineers.

With a response time of 0.2 seconds, +/- 0.01% accuracy, and a moisture measurement range of 0.00-100.0%, the device can be used to assess extremely variable and rapidly changing products as well as processes where quality is critical. The quick response time enables faster production line rates with superior moisture measurement. It has been used in various industrial production lines to test pharmaceuticals, chemicals, foods, textiles, minerals, lubricants, pulp/paper goods, and personal care products.

When its monitoring capabilities are integrated with accompanying Kett Trackertm data collection and analysis software, improved error detection, defect analysis, and product quality result.

As an example, when two smart sensors were used to run different production lines at a manufacturer, the devices’ real-time capability detected periodic, wildly fluctuating moisture values that caused their extrusion process to go out of control. After investigation, it was determined that the manufacturer’s electrical circuits had not been adequately isolated from the effects of a nearby power plant’s operation on shared power lines.

Because moisture control and temperature are closely linked, such smart moisture meters also have a temperature compensation loop on the instrument and provide local temperature as part of the data output, according to Bogart.

Where ambient temperatures change dramatically, this allows simultaneously monitoring of temperature and moisture content to see if process modifications are necessary, depending on daily (i.e.- day/night) or seasonal changes (i.e.- summer/winter).

“Ultimately, smart moisture measurement technology translates into superior process control, quality, and production without the inherent drawbacks of slower, labor-intensive lab or batch testing,” said Bogart.

Smart devices already dominate the consumer market for good reason and have begun to gain prominence in manufacturing and processing.

So, it is now time for industry professionals to look into the significant benefits of smart moisture measurement technology on the production line – and gain the advantage – before their competitors do.



how to evaluate job opportunities, market your services, sell a Walk-through Survey, target areas for an Energy Audit, calculate energy savings, do retrofit work, and win continuing contracts for retrofit work.

[SEE MORE PRODUCTS](#)



Did you enjoy this article?
Subscribe to *Engineered Systems*.

[SUBSCRIBE](#)

I want to hear from you. Tell me how we can improve.

