

Simplifying Moisture Measurement to Improve the Quality and Profitability of Grains and Seeds



Kett KJT130 portable moisture meter - instant moisture measurement on pistachio nuts

When growing, harvesting, buying/selling, processing, and preparing grains, seeds, and other small agricultural products, moisture is one of the most important variables to control. In addition to the quality of the final product, moisture levels completely predict shelf life, product stability, appearance and, of course, price and profitability.

Until recently, however, conducting frequent moisture content tests in the field has been difficult. In many cases, the primary barrier has been the time and expertise required to conduct such tests. Often samples must be brought to centralized locations and require meticulous sample preparation. Sophisticated moisture measurement devices must also be operated by trained personnel that can properly calibrate the equipment.

Fortunately, handheld devices are now available that allow virtually anyone to take essentially lab-quality moisture measurements. These options allow instant readings to be taken in the fields; during post-harvest processing; at auctions and grain elevators; on top of trucks, rail cars, and storage totes; as well as at receiving stations or any stage of blending or food processing.

The Benefits of Frequent Moisture Readings

Although the reasons for measuring the moisture content of grains and seeds can vary, the primary motivation is to improve product quality and the bottom line.

For farmers, quickly measuring samples in fields to determine which are ready to harvest reduces uncertainty and saves time. It also reduces the risk of buyer rejection due to improper moisture content, and maximizes the sales price by enabling the optimum amount of moisture to be counted toward product weight or volume.

Proper post-harvest processing is vital to maximize yield, vigor, longevity and seed crop quality. At maturity, seed must be harvested, threshed, cleaned, and thoroughly dried before storage; and each step involves proper timing, skills, and equipment.

At auction, when buyers get a fast, accurate reading of grain or seed samples, this helps to rapidly decide which product lots to buy and what price to offer.

With speedy, accurate, moisture readings, grain elevator operators can reduce spoilage, insect damage, and explosion risk. A major factor in silo explosions is the presence of airborne grain dust and its combustibility, which can correlate to its level of dryness.

AGRIBUSINESS NEWS



How to Establish A Modern Apiary
December 20, 2018 | 0 Comments



Masters scholarship students from Africa & Asia discover 'farm to fork' on the 2,450 acre Seven Wells Farm
December 13, 2018 | 0 Comments



Wealth in Honey Bees
December 11, 2018 | 0 Comments



Globe Pan-African Conference Kicks off in Naivasha, Kenya.
December 3, 2018 | 0 Comments

CURRENT ISSUE




VISITORS ONLINE

Now online: 145

DO NOT MISS THIS

Select Category

PICTORIAL

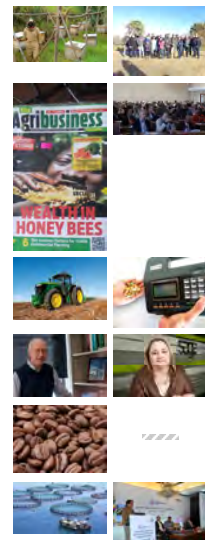

OUR PARTNERS




Volume 4 Issue 5 462 downloads 5.65 MB
[Download](#)

SUBSCRIBE TODAY!
 Pay only \$12 Annually,
 Get access to all our 12 issues
 Access to all the old issues
[CLICK HERE...](#)

Let us add **VALUE** to your **BUSINESS!**

Insurance Specialist
 Insurance Industry of Uganda



For food processors and processors, mobile testing of the moisture content of grains on receipt – and even in trucks, rail cars, and storage totes – can help to ensure product quality. Such testing at various points along the production line can also improve quality and help to prevent altered taste, texture, and appearance, reduced shelf life, or even mold, staleness, and spoilage.

Simplifying Moisture Measurement

Although traditional laboratory and online based moisture measurement techniques are useful in the right settings, they have required rather lengthy centralized testing and lacked the simplicity and flexibility required for frequent spot checks.

One common test is Loss on Drying, which measures the total material weight change after drying. However, such tests traditionally require a sample to be prepared and brought back to an air oven and manually tested (weigh, oven dry, weigh), which can take 2-48 hours to complete depending on the standard.

Alternately, if an automated moisture balance (an integrated weighing and heating unit) is used, testing can take up to 15 minutes. Either way, such testing can be too slow when more immediate measurements are required. It also requires the sample to be altered or destroyed.

As a result, secondary test methods have typically been used to deliver faster results. This type of test uses an indirect method and a single conversion to achieve accurate results. If there is a disadvantage, it is that the secondary instrument must first be calibrated to ensure accuracy. In some cases, calibration can only be performed by trained staff familiar with the equipment.

In response, many agricultural moisture meters have simplified the process, using capacitance technology. Capacitance is a measure of an electric charge separated from a given electric potential; it exists between two conductors insulated from each other.

The dielectric capacitance technology commonly used in grain moisture meters is based on the relationship between a grain's moisture content and its dielectric constant. As its moisture content increases, its dielectric constant increases. Since the rate at which the dielectric constant increases is different for all grain types, a unique calibration is necessary for each grain type.

One unit that follows this approach is the PM650 Advanced Portable Grain and Seed Moisture Meter by Kett, a manufacturer of a full range of moisture and organic composition analyzers. The unit offers instant measurement and over 150 calibrations for the most common grain and seed types. While some agricultural devices may require grain husking and grinding, no sample preparation is required with the portable, battery powered device.

Tests are simple. Pour the sample into the machine, and the moisture content and density (g/l) are instantly displayed. Automatic averaging enables quick spot check measurement of samples in bulk containers. To document such tests, the unit offers digital output to a computer or optional printer.

While many moisture meters using the di-electric principle claim to provide accuracy to +/- 0.5%, to achieve such accuracy it is important to look for a unit that provides automatic density and temperature compensation. This is because changes in ambient, sample, or device temperature will otherwise degrade measurement reliability.


When greater accuracy is needed across a wider range of grain, seed, or other agricultural product types, the most advanced moisture meters utilize Near-Infrared (NIR) light, a highly accurate, non-contact, secondary measurement method that can deliver immediate laboratory quality moisture readings.

"NIR moisture meters follow the principle that water absorbs certain wavelengths of light," says John Bogart, Managing Director of Kett US. "The meter reflects light off the sample, measures how much light has been absorbed, and the result is automatically converted into a moisture content reading."

According to Bogart, such meters allow very accurate instant measurement of any agricultural product without contact or sample preparation, so there is no contamination in handheld and online models. "Once the meter has been calibrated against the lab or production standard, the calibration is stored in the device so no calibration is required in the field," he says.

Unlike air ovens or even moisture balances, portable NIR equipment is designed for ease of use. For example, with Kett's KJT130 Handheld Portable Instant Moisture Meter, the user simply points the instrument at the grains, seeds, or agricultural product. The moisture content is instantly shown on a digital display, with results accurate to .01% in a 0-100% measurement range.

The unit, which is the size of a camcorder and is operated via user friendly menu commands, is designed for frequent spot checks wherever necessary, on both stationary and moving (process line) products. Moisture measurement data can be stored in the instrument, downloaded continuously, or manually recorded.

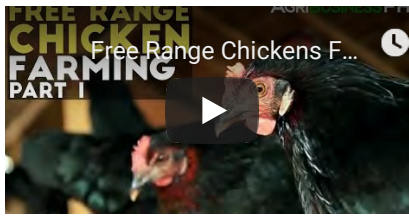

POPULAR EDITORIALS

////

How to Maintain Post-Harvest Grain Quality

September 8, 2015 | 2 Comments

////

Rain, Risk and Reward

September 8, 2015 | 1 Comment

////

4 of 5 Soybean Growers Ignore These Key Nutrients

September 8, 2015 | 1 Comment

"The goal is for anyone to be able to successfully use the moisture meter wherever it is needed, with minimal required training," says Bogart. "This allows ag professionals to be certain that their grain and seed products are of the highest quality."

"The key is to cost-effectively be able to conduct as much testing as required, with full confidence in the results, each and every time," adds Bogart.

Contact the editor for more information on how to acquire the equipment at: editor@theagribusinessmagazine.com

Do not be Mean! Share this with your Friends



About

editorial@theagribusinessmagazine.com

Haam is the Managing Director of Rhamz International a Company that Publishes The Agribusiness Magazine. The Magazine is both print and can be accessed on-line on this website. The magazine is also available on mobile devices for Android and IOS Apple phones

[View all posts by editorial@theagribusinessmagazine.com](#)
→

Related Posts



Smart Tips for starting a simsim business



Uganda is the biggest pork consumer in Africa, Research



\$24m for Climate Change in Uganda

The statements, comments, or opinions expressed through the use of The Agribusiness Magazine Online are those of their respective authors, who are solely responsible for them, and do not necessarily represent the views held by the staff and management of The Agribusiness Magazine.

The Agribusiness Magazine Online reserves the right to moderate, publish or delete a post without warning or consultation with the author. For any questions please contact editor@theagribusinessmagazine.com

MAGAZINE CONTACTS

Get in touch with the Agribusiness Magazine using the following Details;

Location: Plot 401/402 Bombo

Rd, Basiima Building, C08

Office Tel: +256414532546

Mobile: +256772058624

Email:

editor@theagribusinessmagazine.com

IMPORTANT LINKS

[Home](#)

[About Us](#)

[Advertise](#)

[Magazines](#)

[Contact](#)

IMPORTANT LINKS

[Subscription Packages](#)

[Advertise With Us](#)

[Privacy Policy](#)

[The Industry](#)

[About Rhamz International](#)

PUBLISHER CONTACTS



Office Tel: +256414532546

Mobile: +256772058624

Email:

consulting@rhamzinternational.com